

## LED Ground fix

Due to a manufacturing defect the PAD "LED GND" is not connected to the digital ground. Please connect the LED ground wire from the front panel to the PAD "DGND".

Do not connect the LED ground to the ground for the front panel pots.

